

# Pump Bushing Remover & Pump Seal / Bushing Installer

**T-LMNOPAC**

**6L45 / 50 / 80 / 90**

Installing the front seal and bushing on a 6L80 series transmission can be tricky and expensive.

Adapt-A-Case came up with a system to install them both quickly and safely.

Simply press the old bushing though the seal side. Then install a Durabond bushing (no wider than 0.765"). It should be pressed though the pump side of the bell housing. Next use the aluminum installer on the o-ring side to install the seal.



[WWW.ADAPT-A-CASE.COM](http://WWW.ADAPT-A-CASE.COM)



**ADAPT-A-CASE**



**WORK SMARTER NOT HARDER**