

# T-SLIDEAC INSTRUCTIONS


Step 1) Find a desired spot to place your new Slide Plate. Spin the Slide Plate around on top of your bench so that the front is facing the back, bring the Slide Plate flush up to the front of your bench.

Step 2) Clamp in place, then drill a  $13/32$ " hole at the end of each sliding groove near front of the bench.

Step 3) Slide bars mount beneath the Slide Plate below the bench. With head of carriage bolt through the top of the bench.

## Note:

This slide plate is designed for an up or zero lip bench, no need to cut your down lip bench! We have spacers coming soon.

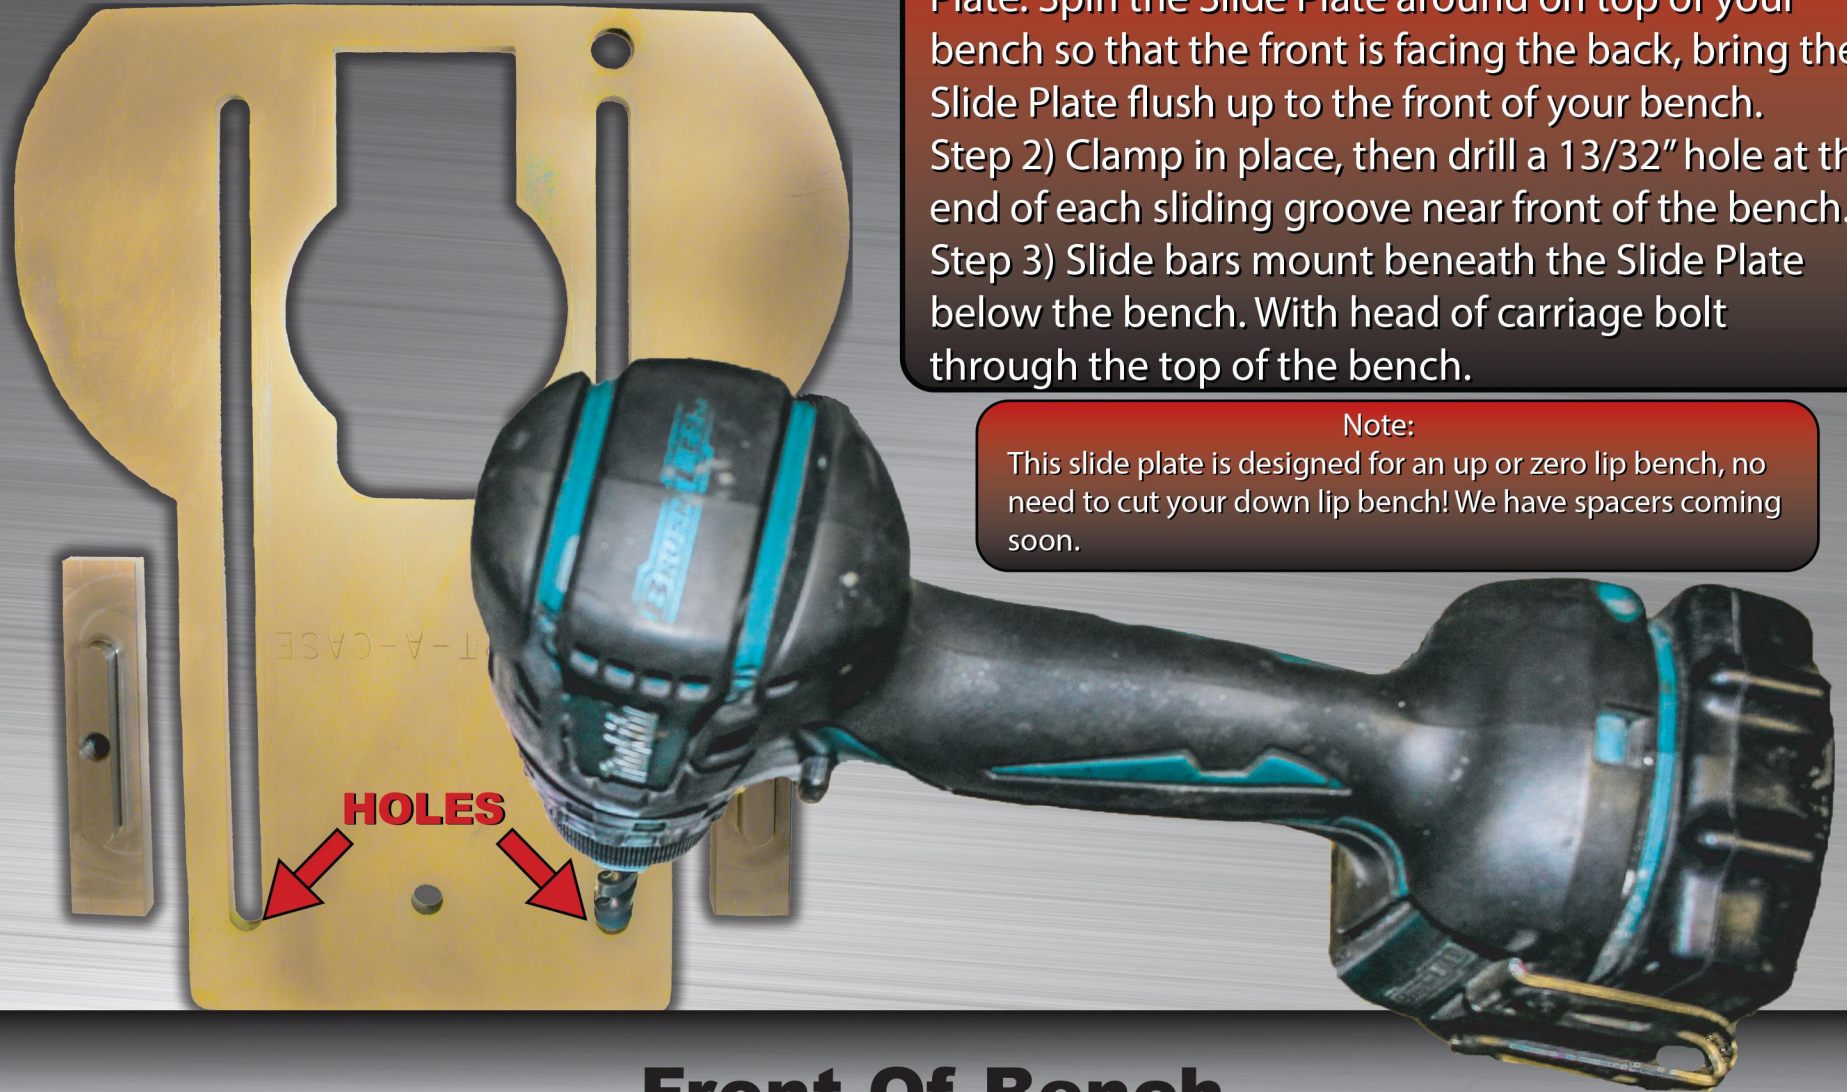

**Front Of Bench**